


# H3

## 3X9M GAZEBO

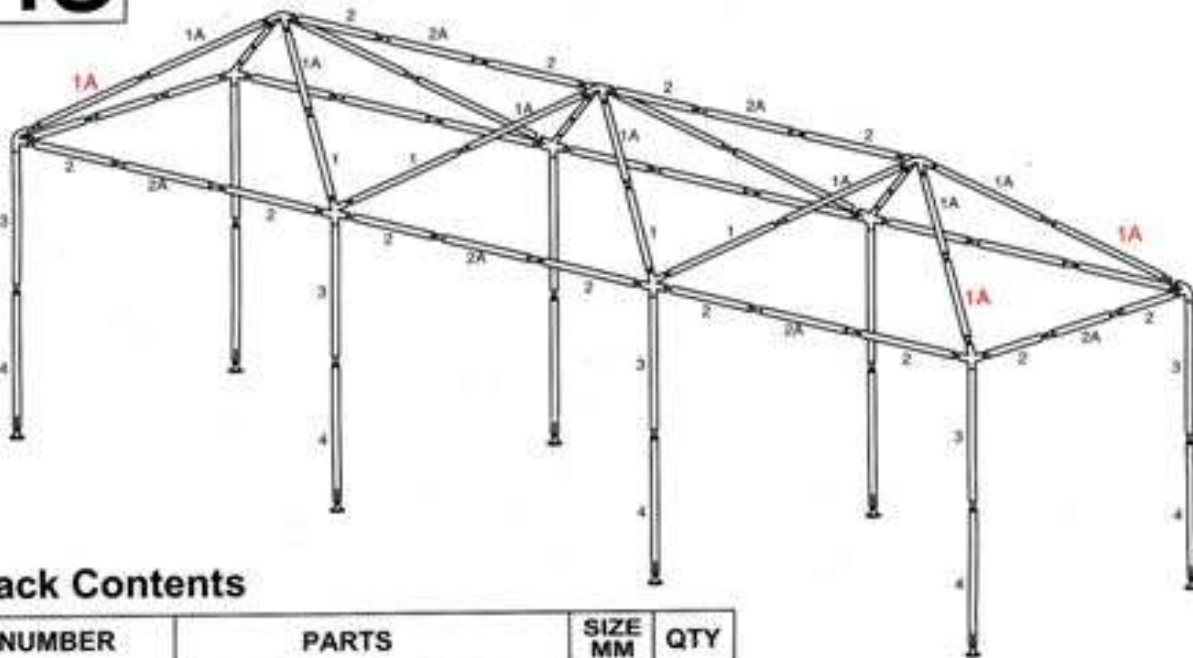

### Pack Contents


NUMBER	PARTS	SIZE MM	QTY
1		1080	8
1A		1080	16
2		1000	20
2A		1000	10
3		1060	8
4		1000	8
Side Corner Joints 4 way			4
Side Corner Joints 5 way			4
Centre Connector 6 way			1
Centre Connector 5 way			2
BASE PLATE			8
STAKE			16
ROPES			8
CURTAIN RING			46
COVER			1
9X2M SIDE PANEL			2
3X2M SIDE PANEL			2

### Customer Care

- \* This Gazebo is not a permanent structure and should be disassembled and stored away after use.
- \* Do not repack your Gazebo until completely dry.
- \* This Gazebo must be assembled by two persons.
- \* This Gazebo must not be left erect in windy conditions.
- \* If you have any problems with your Gazebo please call our helpline on 0151 520 0074.

# STEP BY STEP GUIDE TO ASSEMBLY


## Step 1

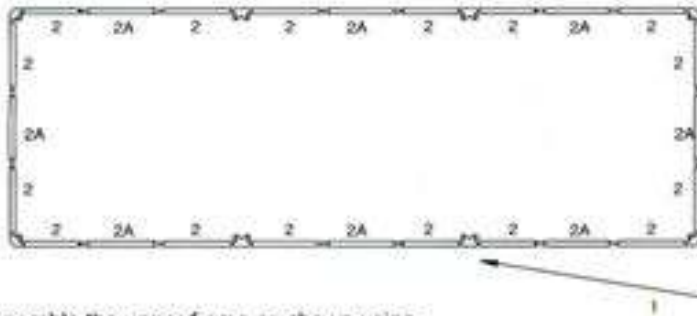

Assemble the upper frame as shown using Tubes, 2, 2A & the Side Corner Joints

SIDE  
CORNER  
JOINTS

## Step 2

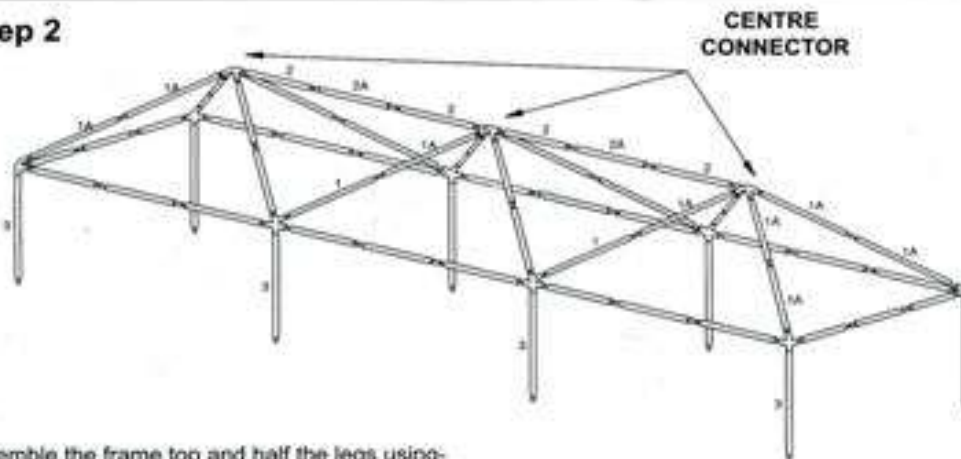

Assemble the frame top and half the legs using Tubes, 1, 1A, 2, 2A & the Centre Connector

## Step 3



Place the cover tightly over the frame.


### FIRE PRECAUTIONS

This gazebo can burn.  
Do not use naked flames in the gazebo.  
This gazebo has no flame retardant cooking area.

Customer Care / Helpline Number For spare parts or assistance call 0151 520 0074.

# STEP BY STEP GUIDE TO ASSEMBLY

## Step 4

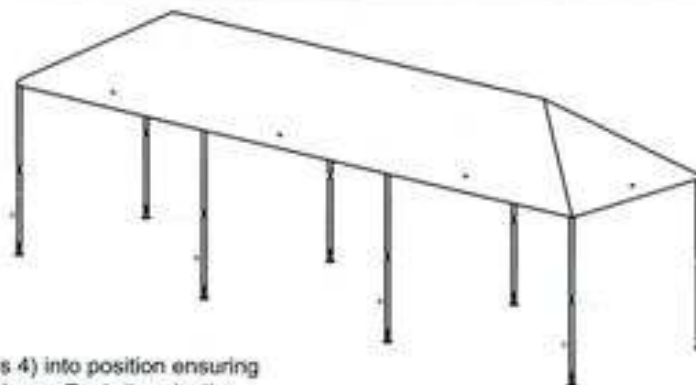


Slot the remaining legs (Tubes 4) into position ensuring the side tube holes are at the base. Push the plastic feet into place.

## Step 5



Pull the leg covers taught and attach the metal hooks into the tube holes near the feet. If the cover becomes loose, tighten by moving the hook to a lower hole. The securing ropes can now be fitted if required.

## Step 6

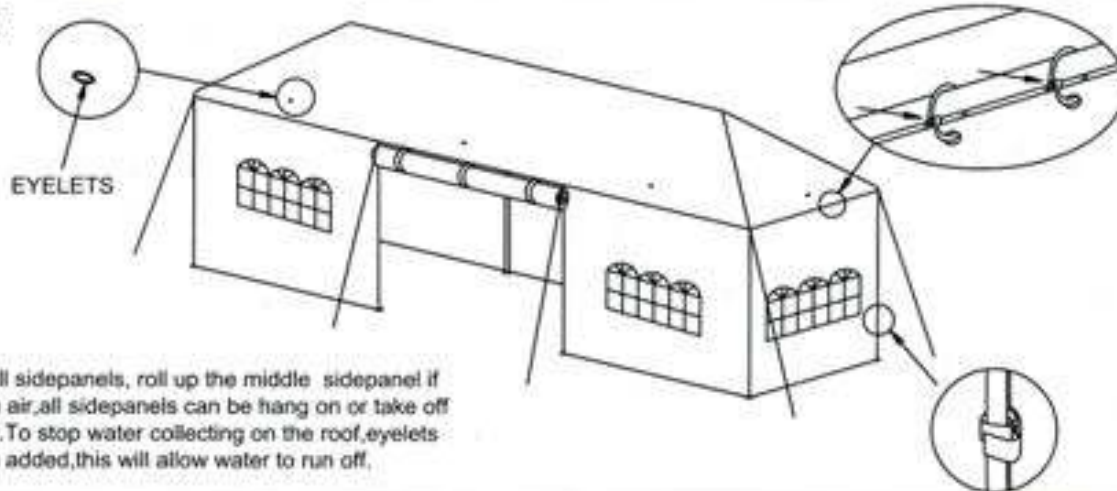

Hang on all sidepanels, roll up the middle sidepanel if need fresh air, all sidepanels can be hang on or take off separately. To stop water collecting on the roof, eyelets have been added, this will allow water to run off.

### FIRE PRECAUTIONS

This gazebo can burn.  
Do not use naked flames in the gazebo.  
This gazebo has no flame retardant cooking area.

Customer Care / Helpline Number For spare parts or assistance call 0151 520 0074.