

EASY UP GAZEBO ASSEMBLY INSTRUCTIONS FOR ALL MODELS 2.5M & 3M

* This Gazebo must be assembled by at least 2 People

* Do not use force - if unsure go back and review each step

STEP 1

Remove from the storage bag and stand the Gazebo upright on its legs. Each adult should hold a corner each and pull the 4 corner uprights outwards slowly until half extended.

Check that the roof canopy is not caught then pull the corner uprights into their full position.



STEP 2

Secure each corner one at a time, Fix the frame into position by moving the black sliding assembly into its click position at the top of each corner upright. Support should be given to the roof apex poles to ensure that they are positioned correctly.



STEP 3

To raise the roof height extend the corner uprights into position by lifting evenly with your foot pressed holding the upright base plate until the legs lock into the extended position.



STEP 4

Pull the fabric Roof into position so that it fits tightly at each corner and secure the Leg fabric clip into one of the holes in the leg upright.

Secure velcro ties (inside Roof Canopy) to the





STEP 5

Finally secure all corners of the Gazebo by using the pegs and guide ropes provided. Attatch the guide ropes to the roof fabric at the top

Attatch the guide ropes to the roof fabric at the top of each corner upright and peg securely into the Ground. Please ensure that every corner upright is also pegged down using the pegs provided.



WARNING/SAFETY ADVICE & MAINTENANCE

- * ALWAYS SECURE THE GAZEBO WITH GROUND PEGS & GUIDE ROPES PROVIDED
- * DO NOT USE NAKED FLAMES I.E BBQ IN OR NEAR THE GAZEBO THESE GAZEBOS HAVE NO FLAME RETARDANCY.
- * THIS GAZEBO MUST NOT BE LEFT OUT IN SEVERE WEATHER CONDITIONS I.E HEAVY RAIN OR SNOW OR STRONG WINDS.
- * ENSURE THAT THE GAZEBO IS COMPLETELY DRY BEFORE STORAGE

Gazebo frame.

- * THIS GAZEBO MUST NOT BE USED AS A PERMANENT STRUCTURE AND SHOULD BE TAKEN DOWN AFTER USE.
- * THIS GAZEBO IS DESIGNED AS A TEMPORARY SHELTER AND IS OK TO BE USED IN LIGHT SHOWERS

DISMANTLING INSTRUCTIONS

* This Gazebo must be assembled by at least 2 People

* Do not use excessive force

STEP 1

Release guide ropes and remove pegs from corner base plates.

* Important - Release velcro ties from the roof canopy and undo metal roof clips



STEP 2

Lower the height by pressing in the clip on each

upright.

Fold the roof & corner fabric back into the frame ensuring the fabric is not trapped in the folding

mechanism

STEP 3

In each top corner slide the black sliding assembly down the upright allowing the frame to fold in towards the centre. Ensure that when folded in the canopy does not cause any part of the frame to twist.

No force is required.

STEP 4

Place the Gazebo back into the storage bag making sure it is completely dry.







AFTERCARE/CUSTOMER SERVICES

IN THE UNLIKELY EVENT ANY PARTS ARE DAMAGED ALL THE METAL/PLASTIC COMPONENTS ON YOUR GAZEBO CAN BE REPLACED. CONTACT US BY EMAIL AT SALES@SOLUSGL.COM PLEASE TRY AND SEND PHOTOS AND MEASUREMENTS WITH YOUR REQUEST.

TOP TIP: TO PROLONG THE LIFE OF THE MATERIAL OF YOUR GAZEBO WHY NOT TRY THE CAMELOT FABRIC PROTECTOR - USE IT AS AND WHEN REQUIRED TO REFRESH AND PROVIDE A PROTECTIVE COATING ON YOUR ROOF CANOPY. AVAILABLE AT ALL GOOD GARDEN CENTRE STOCKISTS.



PRODUCED FOR THE CAMELOT BRAND FOR SOLUS GARDEN & LEISURE LTD B62 OEW - EM:SALES@SOLUSGL.COM

VISIT OUR WEBSITE FOR MORE INFORMATION OR SCAN THE QR CODE

CAM0459 FABRIC PROTECTOR

