 


3x3 Pop Up Gazebo with Side Panels Waterproof

Assembly Instructions - Please keep for future reference

651/0037

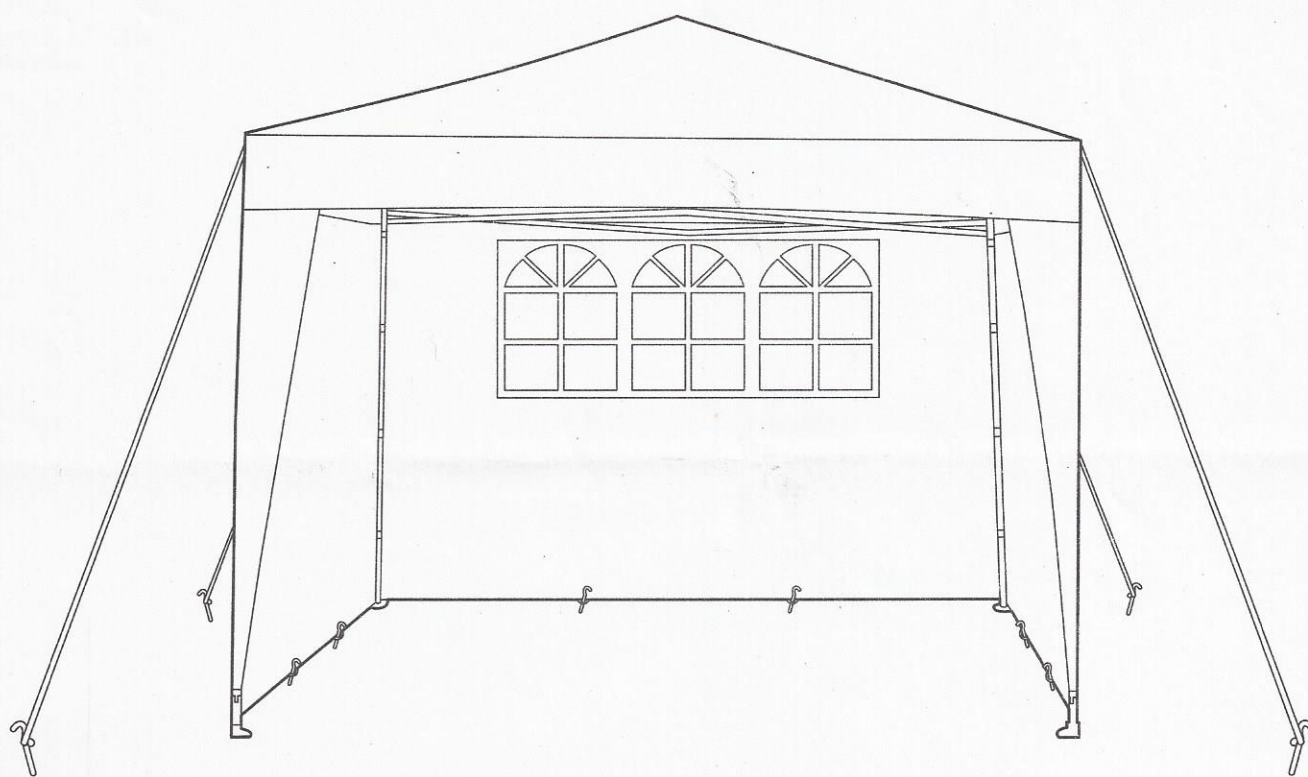

Dimensions

Width - 300cm

Depth - 300cm

Height - 255cm



Important: This Gazebo Must be opened, erected and dismantled by 2 people at least



Important: Make sure all the guy ropes and pegs are used, otherwise the gazebo will be unstable!

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**

Retailer: Argos



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components, fittings and tools listed on page 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- **Do not Assemble or Dismantle during strong winds.**
- This unit is not a permanent fixture - **Do not use or leave erected in windy conditions.**

- Follow all safety and fire precautions when in or near this Gazebo.
- Please note that this Gazebo is Shower proof and not Waterproof.
- Practice assembling and dismantling the Gazebo before use to familiarise yourself with the components and fittings.
- Take note of all the components and fittings and ensure you don't forget anything when dismantling.
- Before each use check you have all the components and fittings, and that none of them are damaged.

Positioning:

- To prevent the wind blowing into the entrance, position the Gazebo so the entrance is away from prevailing winds.
- Ensure the ground is level, free from debris and sharp objects that could damage the fabric. Avoid pitching under trees but make use of any natural wind breaks such as hedge rows etc. **Heavy winds and rain could damage the Gazebo.**
- Try to locate the Gazebo at least 5 - 10 meters away from any other campers where possible.
- **Warning:** The unit weighs approximately 15.5 kgs. **Please lift with care.**

Fire precautions and safety



The canopy and sides of this Gazebo are not fire proof, follow the fire precautions and safety at all times.

- Do not use naked flames in or around the Gazebo - **there is no cooking area within the Gazebo.**
- Do not store cooking apparatus, BBQs etc within the

Gazebo as it may cause a fire hazard.

- Do not smoke or allow smoking in or around the Gazebo.

Care and storage

- Take care when dismantling the Gazebo. Follow the assembly instructions in the reverse order and do not force the frame.
- Never remove the pegs by pulling on the guy ropes, fabric or Gazebo legs.

- Ensure all parts of the Gazebo are **completely dry before repacking.**
If necessary unpack the parts when you return home and allow to dry completely before repacking and storing.

 
 
 
 
 
 
- All parts should be cleaned and packed separately. **When completely dry** gently remove any dirt and debris from the fabric with a soft brush.
- **Never use abrasive cleaners or detergents.**

Components - Parts & Fittings


If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800**

Please check you have all the parts & fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

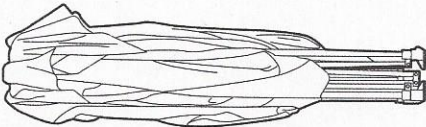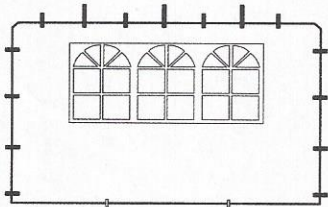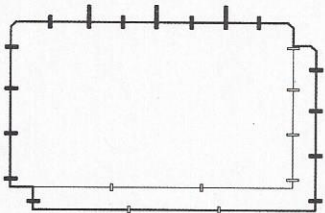1  Tent bag x 1	2  Gazebo x 1	3  Back panel x 1
4  Side panel x 2	A  Peg x 14	B  Guy rope x 4
C  Gurtain ring x 4		

 Tools required



D Rubber mallet x 1

Assembly Instructions

Step 1

Opening the Gazebo

Note: At least 2 people are required for this procedure.

a & b: Stand the Gazebo **2** upright.

 
 
 
With people at diagonally opposite corners, carefully pull the Gazebo partly open.

Move to each side, carefully pulling the frame apart until it has expanded as shown in diagram b.

c & d: Lift the canopy to reveal the framework.

With people at opposite sides, carefully push up and down on the frames where shown.

Move to each side, carefully pulling (compressing) the frame together until it has expanded as shown in diagram d.

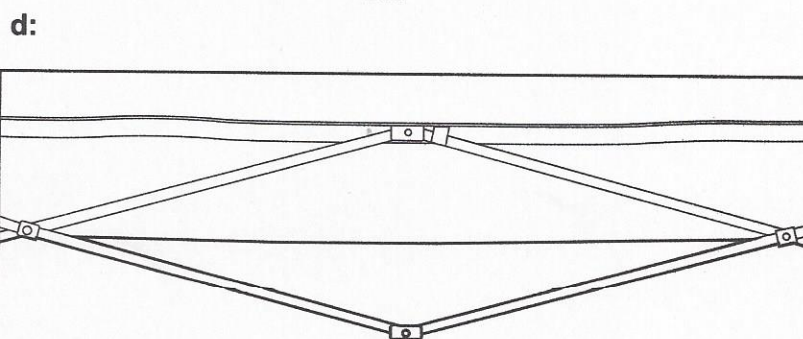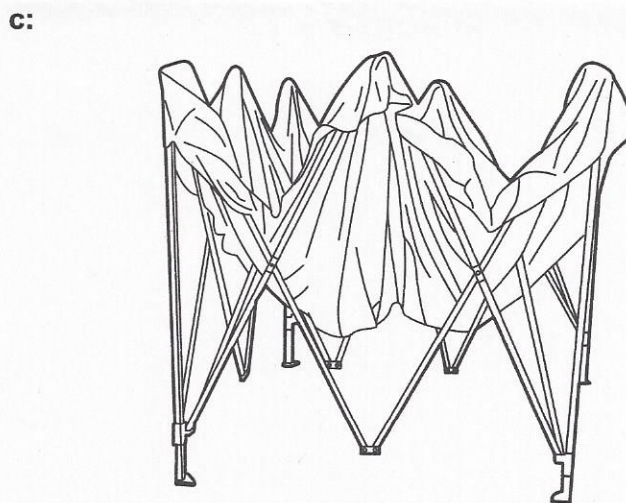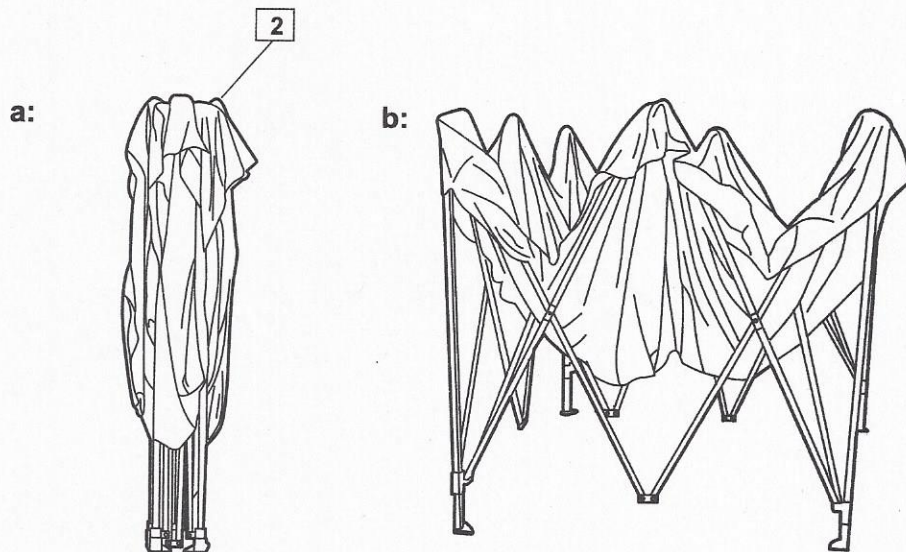

Caution: Do not compress frame sides more than shown

Assembly Instructions

Step 2

Locking and extending the Gazebo frame

Note: At least 2 people are required for this procedure.

a: In one corner at a time, lock the Gazebo frame **2** in position by sliding the corner bracket up until the spring clip engages into the bracket.

Pull and extend each leg until the spring clips engage into the hole in the outer tubes.

Note: There are two spring clip location holes in each leg, using the lower holes will increase the canopy tension, pulling it tighter.

b: Use the velcro tapes top frame as shown

 
 
 
 
c: From inside, check that of the frame sides are as shown.

Note: each velcro tap frame are as shown.

- ① stretch the tap first
- ② stick velcro tap second

Warning: the velcro tap must stretch tight as this could cause rain water to collect on the canopy and a hazard.

Do not compress more than shown or the frame can be damaged.

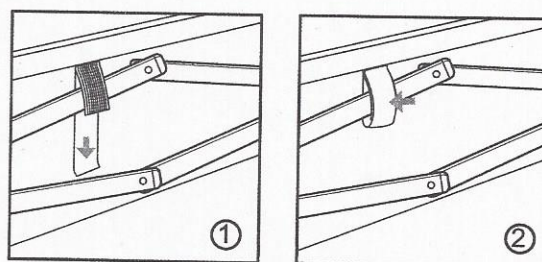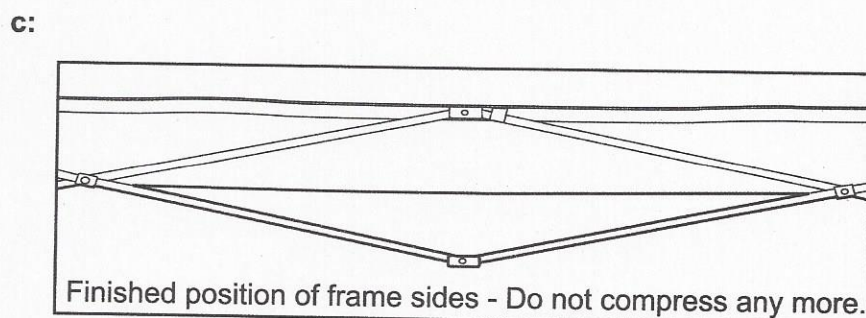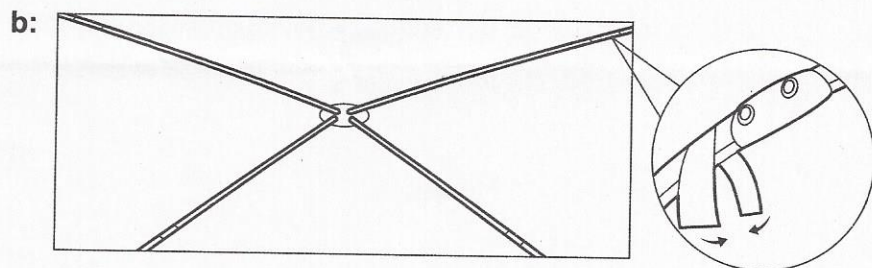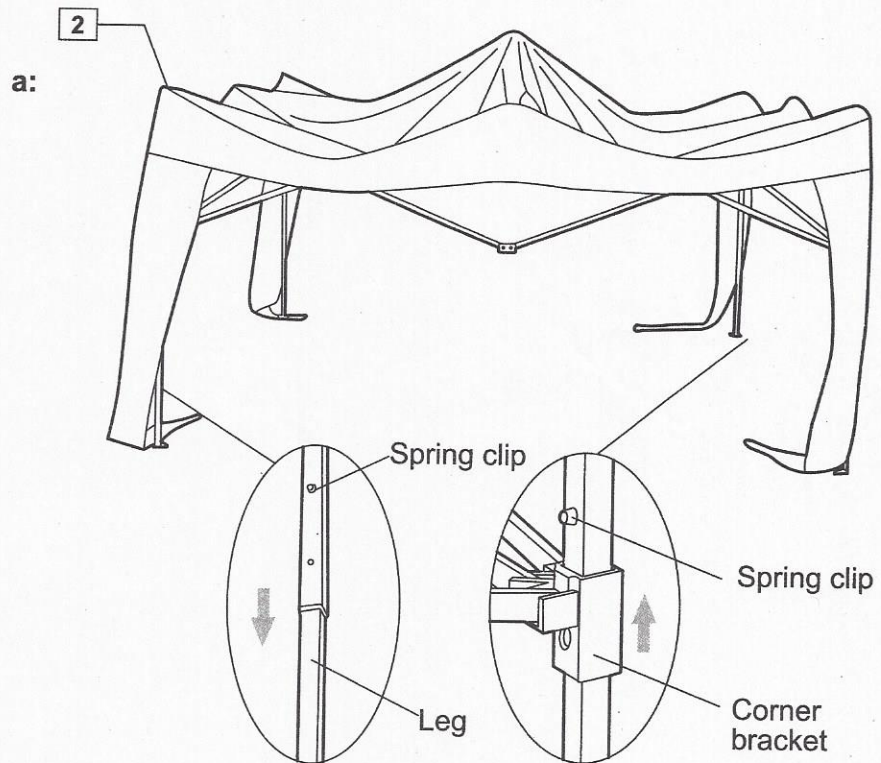

Assembly Instructions

 
Step 3

Fitting the legs


a: Secure the gazebo **2** to the ground at each corner. Insert two pegs **A** through the hole in each Frame leg into the ground (insert at an angle).

Take care not to bend the pegs, use a rubber mallet to help insert if required.


b: Attach the hooks on the end of the canopy legs to the holes at the end of the frame leg, the canopy cover can be tightened by moving the hooks to a lower hole.

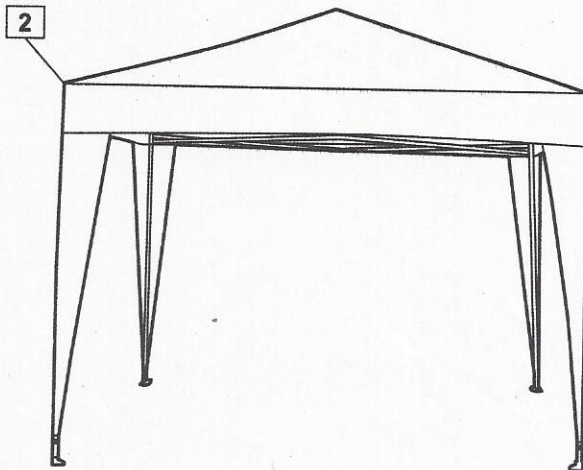

a:

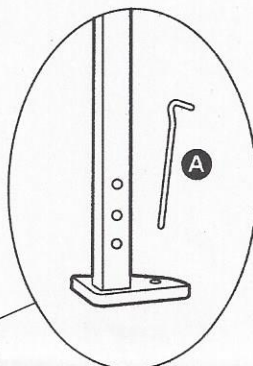 

b:

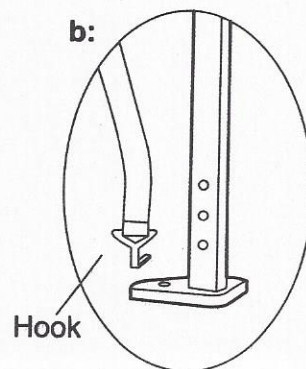 

Step 4

Attaching the guy ropes

Note: At least 2 people are required for this procedure.

a: Attach the end of each guy Rope **B** to a "D" ring at each corner of the canopy cover.

b: Use the pegs **A** to secure the other end of the guy rope to the ground (insert at an angle).

 
c: The length of the guy rope **B** can be adjusted by feeding the rope through the tensioner.

Remove any slack from the Guy rope by holding the lower end of the rope and sliding the tensioner up towards the tent.




Caution:


Do not over tighten the Guy ropes as this can damage the fabric cover.





a:

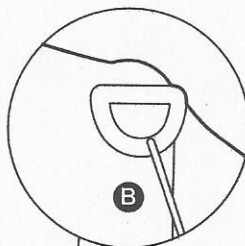 

c:

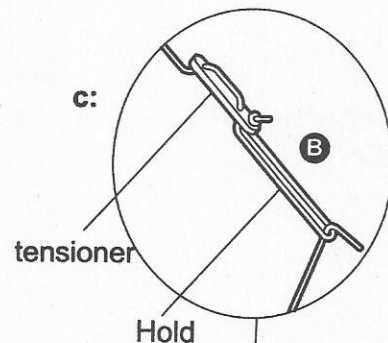 

b:

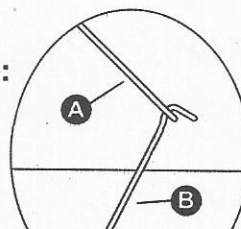  

Assembly Instructions

Step 5

Assembly Instructions Fitting the sides

Note: At least 2 people are Required for this procedure.

a: Use the Velcro tapes on the Back and side panels **3** & **4** To secure the panels onto the frame work.

Note: each velcro tap frame are as shown.

 
- ① stretch the tap first
- ② stick velcro tap second

Warning: the velcro tap must stretch tight as this could cause rain water to collect on the canopy and a hazard.



Note: to avoid rain water entering the gazebo, ensure the curtain ring **C** is attached as shown.

Insert the pegs **A** to each side wall in the bottom.

The assembly is now complete

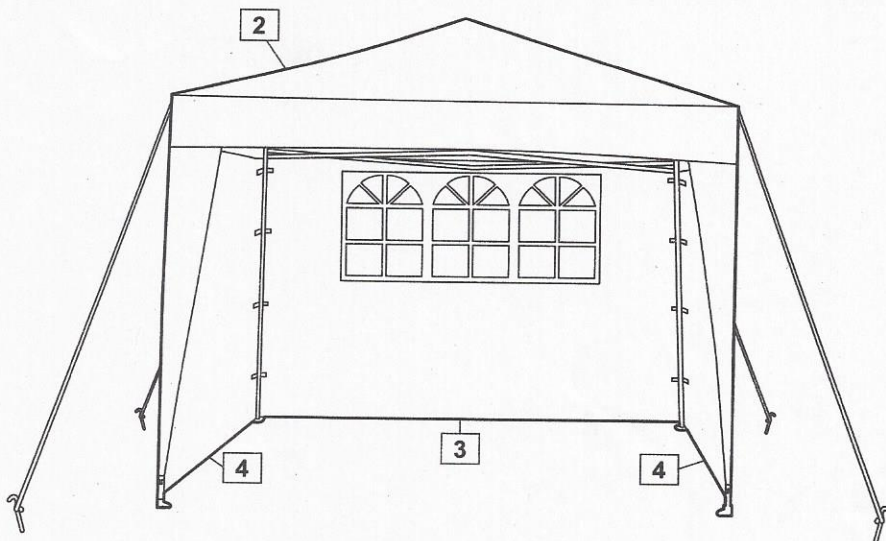

a:

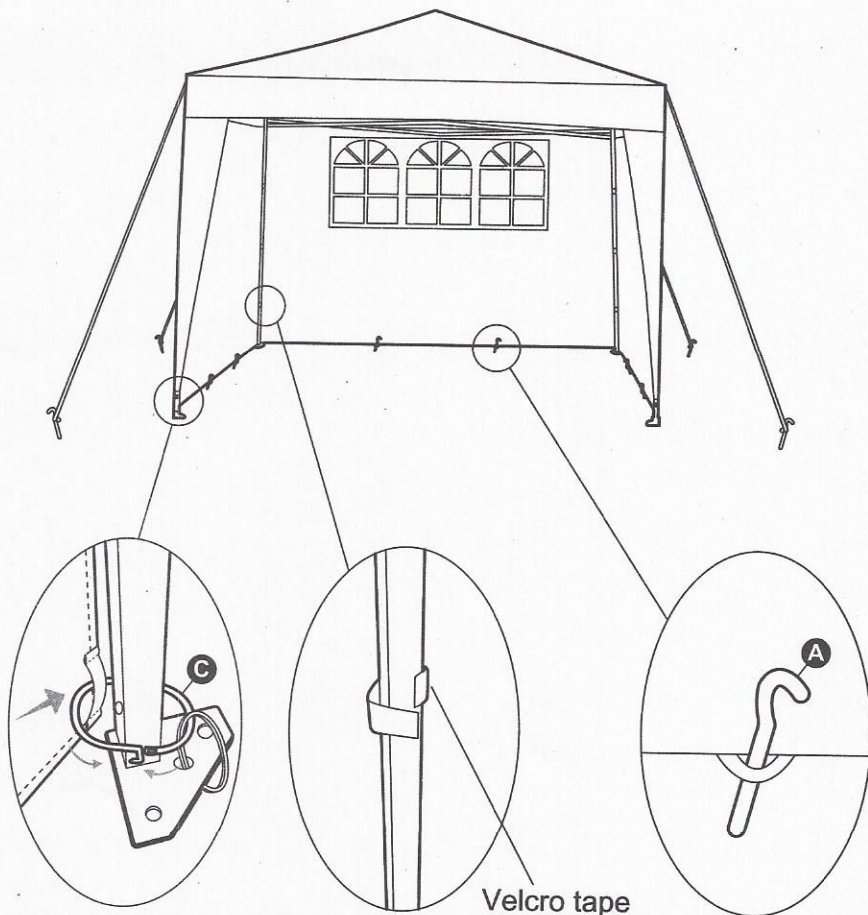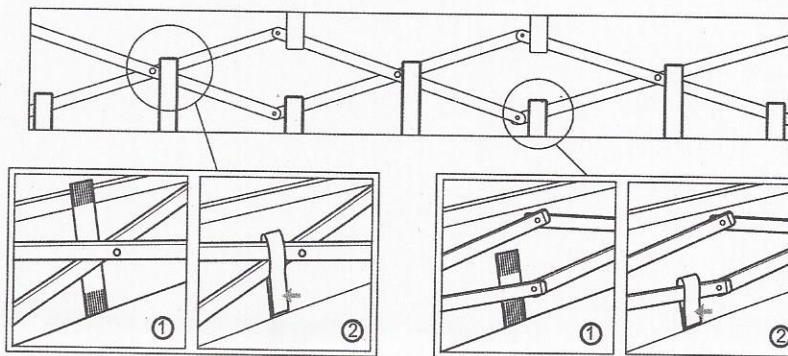  

Folding Instructions

Step 6

Folding the Gazebo

Note: At least 2 people are required for this procedure.

Take care when dismantling the Gazebo. Follow the assembly instructions in the reverse order and do not force the frame.

 
 
 
 
- a:** Remove the back and side panels
- b:** Remove the guy ropes and pegs
- c:** Unhook the canopy from the frame legs and remove the pegs.
- d:** Push in the spring clips and slide up the frame legs
- e:** Push in the spring clips and (slightly) lower the corner brackets.
- f:** With people at diagonally opposite corners, carefully lift and push the gazebo together.

Do not force the frame.

Repeat at each corner until the gazebo is fully folded.

Store all of the components and fittings in the tent bag **1** provided.

WARNING: If use the gazebo in outside, please make sure to take up the side wall.

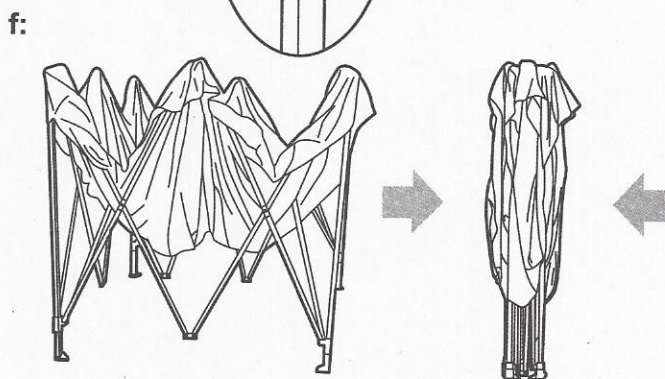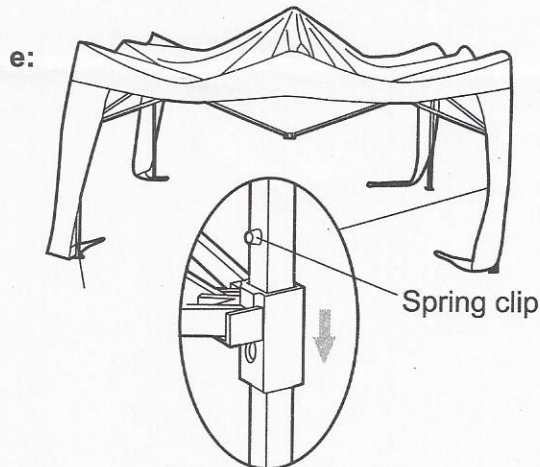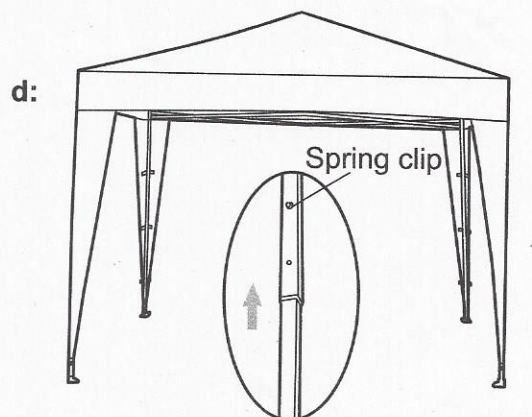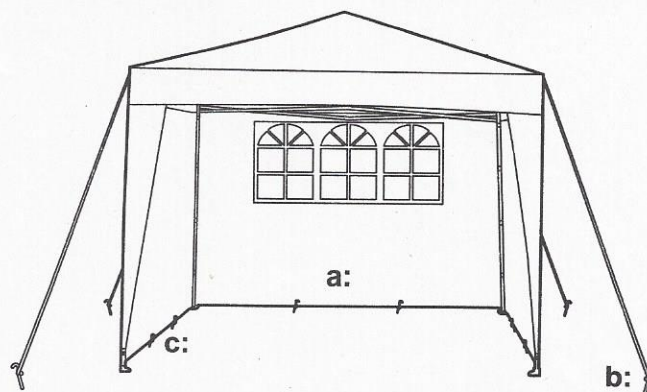

Warning: in heavy wind , if you want to leave the gazebo outside , please remove the side panels

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**

Retailer: Argos

Address: 480, 482, 484, 486, 488, 490, 492, 494, 496, 498, 500, 502, 504, 506, 508, 510, 512, 514, 516, 518, 520, 522, 524, 526, 528, 530, 532, 534, 536, 538, 540, 542, 544, 546, 548, 550, 552, 554, 556, 558, 560, 562, 564, 566, 568, 570, 572, 574, 576, 578, 580, 582, 584, 586, 588, 590, 592, 594, 596, 598, 600, 602, 604, 606, 608, 610, 612, 614, 616, 618, 620, 622, 624, 626, 628, 630, 632, 634, 636, 638, 640, 642, 644, 646, 648, 650, 652, 654, 656, 658, 660, 662, 664, 666, 668, 670, 672, 674, 676, 678, 680, 682, 684, 686, 688, 690, 692, 694, 696, 698, 700, 702, 704, 706, 708, 710, 712, 714, 716, 718, 720, 722, 724, 726, 728, 730, 732, 734, 736, 738, 740, 742, 744, 746, 748, 750, 752, 754, 756, 758, 760, 762, 764, 766, 768, 770, 772, 774, 776, 778, 780, 782, 784, 786, 788, 790, 792, 794, 796, 798, 800, 802, 804, 806, 808, 810, 812, 814, 816, 818, 820, 822, 824, 826, 828, 830, 832, 834, 836, 838, 840, 842, 844, 846, 848, 850, 852, 854, 856, 858, 860, 862, 864, 866, 868, 870, 872, 874, 876, 878, 880, 882, 884, 886, 888, 890, 892, 894, 896, 898, 900, 902, 904, 906, 908, 910, 912, 914, 916, 918, 920, 922, 924, 926, 928, 930, 932, 934, 936, 938, 940, 942, 944, 946, 948, 950, 952, 954, 956, 958, 960, 962, 964, 966, 968, 970, 972, 974, 976, 978, 980, 982, 984, 986, 988, 990, 992, 994, 996, 998, 1000