

B&Q

POP UP GAZEBO ECRU 3X3

IMPORTANT PLEASE NOTE


THESE POP-UP GAZEBO INSTRUCTIONS ARE FOR ILLUSTRATION PURPOSES AND MAY NOT REPRESENT THE PRODUCT YOU HAVE PURCHASED I.E. SIZE AND COLOUR MAY VARY

IMPORTANT: THIS GAZEBO MUST BE ERECTED BY 2 PEOPLE

- Do not use force when erecting your gazebo.
- If your gazebo does not erect easily review each step
- The gazebo is not a permanent structure and must be dismantled during adverse weather conditions

STEP 1

Stand the gazebo upright with one person either side of the gazebo. Take hold of each corner and walk backwards slowly, so that the gazebo opens up slightly. Lift the edge of the canopy to see a 'V' Shape, pointing towards the ground. Take hold of the 'V' shape (With markings 'LIFT HERE TO OPEN') lifting and pushing at the same time walk slowly backwards until the gazebo is fully expanded. As shown in diagrams 2 and 4

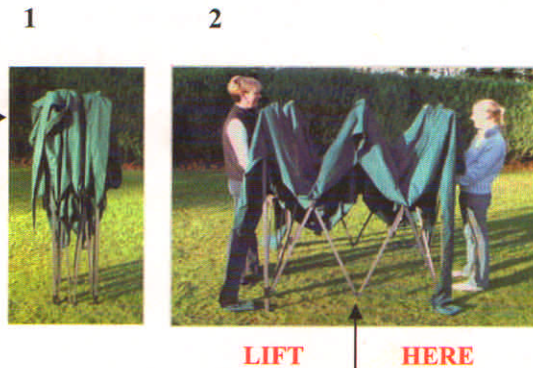

STEP 2

One corner at a time, fix the frame into position by moving the black sliding assembly into its spring clip lock position at the top of the uprights. As shown in diagrams 3 and 4



STEP 3

Raise the roof height by extending the uprights into position, lifting evenly with your foot holding the upright base plate until the legs lock into one of the 2 extended positions. As shown in diagrams 5 and 6



STEP 4

Fix the fabric roof over each corner of the frame and secure the metal hooked clips into either of the three holes provided at the bottom of each leg. As shown in diagrams 7 and 8



STEP 5

Attach the guy ropes through the holes provided at the top of each corner of the uprights. Using the guy ropes and pegs provided, secure the gazebo.



FIRE PRECAUTIONS

- THIS GAZEBO CAN BURN
- DO NOT USE NAKED FLAMES IN THE GAZEBO
- THIS GAZEBO HAS NO FLAME RETARDANT COOKING AREA

B&Q Plc, Chandlers Ford, Hampshire, SO53-3YX

Visit us at www.diy.com

Customer Help Line Telephone Number: 0151 5200074 Monday-Friday 09.00-17.00

DISMANTLING INSTRUCTIONS

IMPORTANT: THIS GAZEBO MUST BE DISMANTLED BY 2 PEOPLE

- Do not use force when dismantling your gazebo.
- If your gazebo does not dismantle easily review each step
- The gazebo is not a permanent structure in the likelihood of adverse weather conditions your gazebo must be dismantled

STEP 1

Undo the metal clips as shown here. →



STEP 2

Lower the height of each leg by pressing the clip lock pins on the uprights as shown. →



STEP 3

One corner at a time, push in the clip lock pins in each black Sliding assembly; slide the assembly down the upright to enable folding of the frame as shown. →



STEP 4

Gently lift the edge of the canopy where you see a 'V' shape with a label saying '**LIFT HERE TO CLOSE**' (see diagram) with two people opposite each other hold the top of the plastic bracket and lift upwards, do not lift from the underneath of the bracket as this could entrap your hand/fingers. Now walk slowly forward to the centre, and your gazebo will fold, as shown.

LIFT **HERE**



Your gazebo is now ready for storage.

WARNING

- THIS GAZEBO MUST **NOT** BE LEFT ERECTED IN WINDY CONDITIONS
- THIS GAZEBO MUST BE COMPLETELY DRY BEFORE STORAGE



B&Q Plc, Chandlers Ford, Hampshire, SO53-3YX

Visit us at www.diy.com

Customer Help Line Telephone Number: 0151 5200074 Monday-Friday 09.00-17.00